


SM1200B-600

RS485 bus 600 point DS18B20 temperature acquisition module

User Manual

File Version: V23.6.19

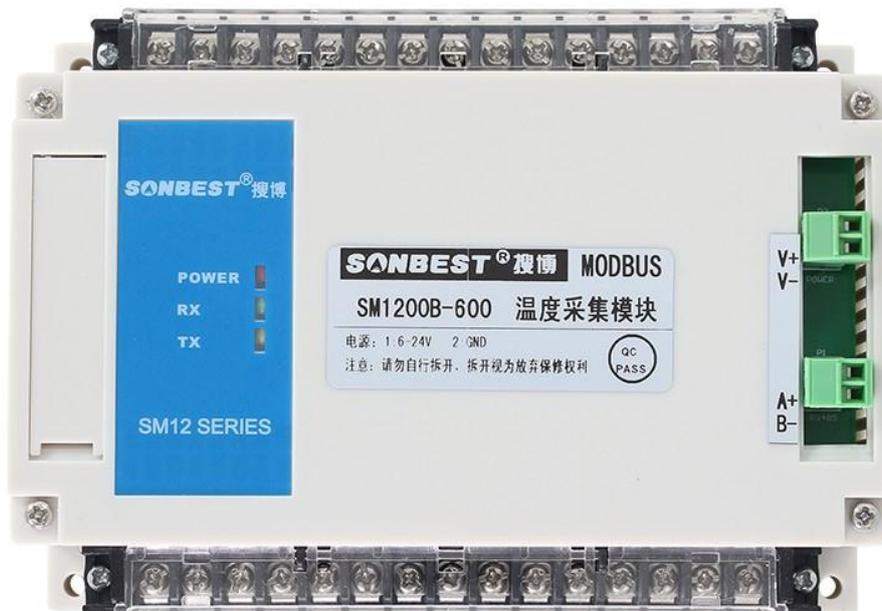



SM1200B-600 using the standard RS485 bus MODBUS-RTU protocol, easy access to PLC, DCS and other instruments or systems for monitoring temperature $\times 60 @ 10$ state quantities. The internal use of high-precision sensing core and related devices to ensure high reliability and excellent long-term stability, can be customized RS232, RS485, CAN, 4-20mA, DC0~5V/10V, ZIGBEE, Lora, WIFI, GPRS and other output methods.

Technical Parameters

Technical parameter	Parameter value
Brand	SONBEST
Temperature measuring range	-30°C~85°C
Temperature measuring accuracy	±0.5°C @25°C
Support sensors	600
Channels	10
Max Sensors of channel	60
Support sensor	sensor of DS18B20
Communication Interface	RS485
Default baud rate	9600 8 n 1
Power	DC9~24V 1A
Running temperature	-30~85°C
Working humidity	5%RH~90%RH

Product Size

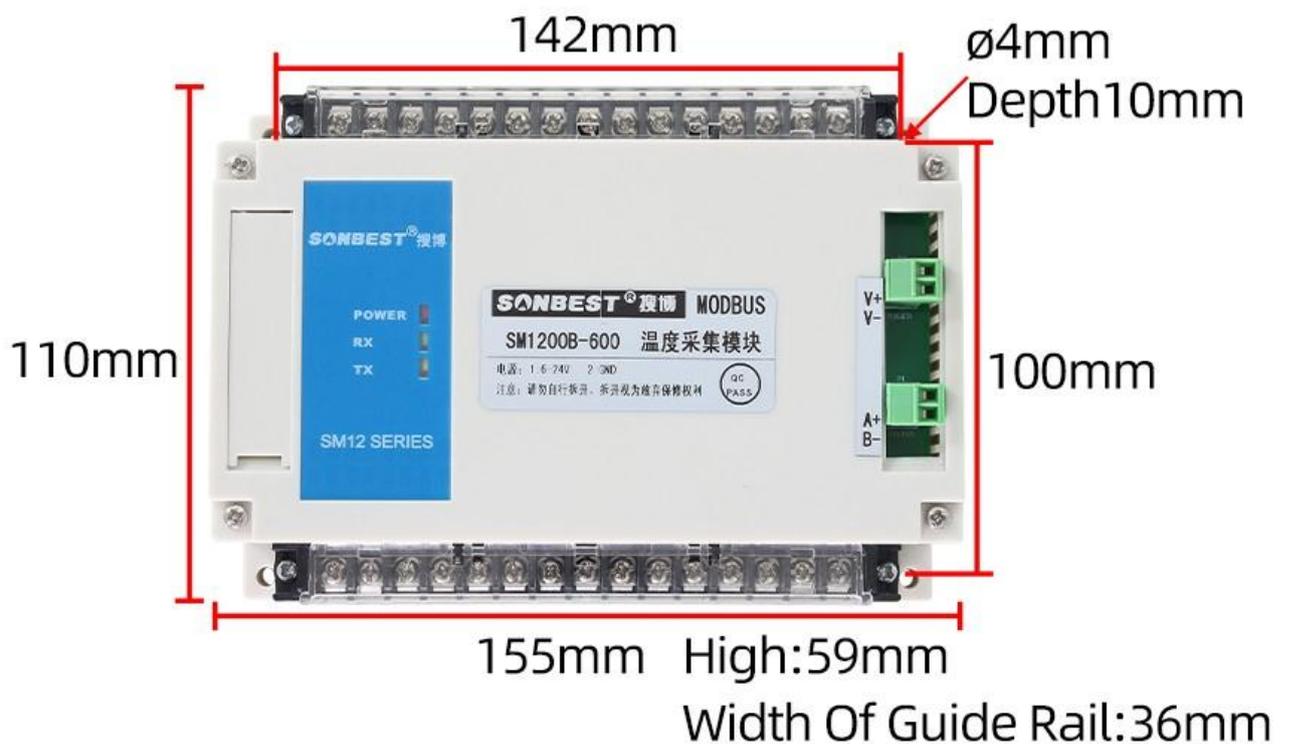

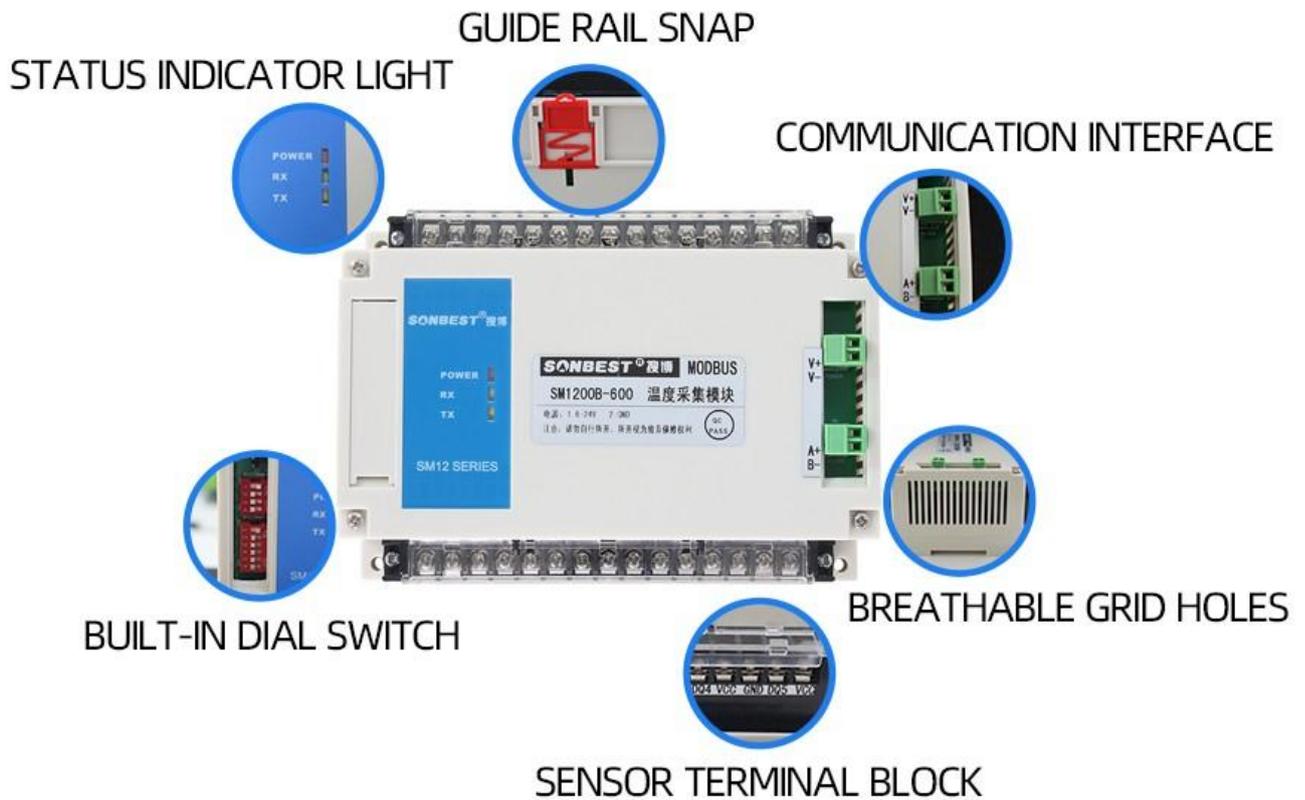

Connection mode

WIRING

V+	PWR+	VCC	Sensor PWR+
V-	PWR-	DQ1	Channel 1 signal line
		
A+	RS485 A+	DQ10	Channel 10 signal line
B-	RS485 B-	GND	Sensor PWR-

※Note: When wiring, first connect the positive and negative poles of the power supply, and then connect the signal line

Wiring instructions

In the case of broken wires, wire the wires as shown in the figure. If the product itself has no leads, the core color is for reference.

How to use?


The temperature acquisition module can be widely used in indoor temperature measurement fields such as granary warehouses, heat source heat pumps, machine room workshops, libraries, museums, offices, archives, etc.



Application solution

■ Single module


Acquisition module

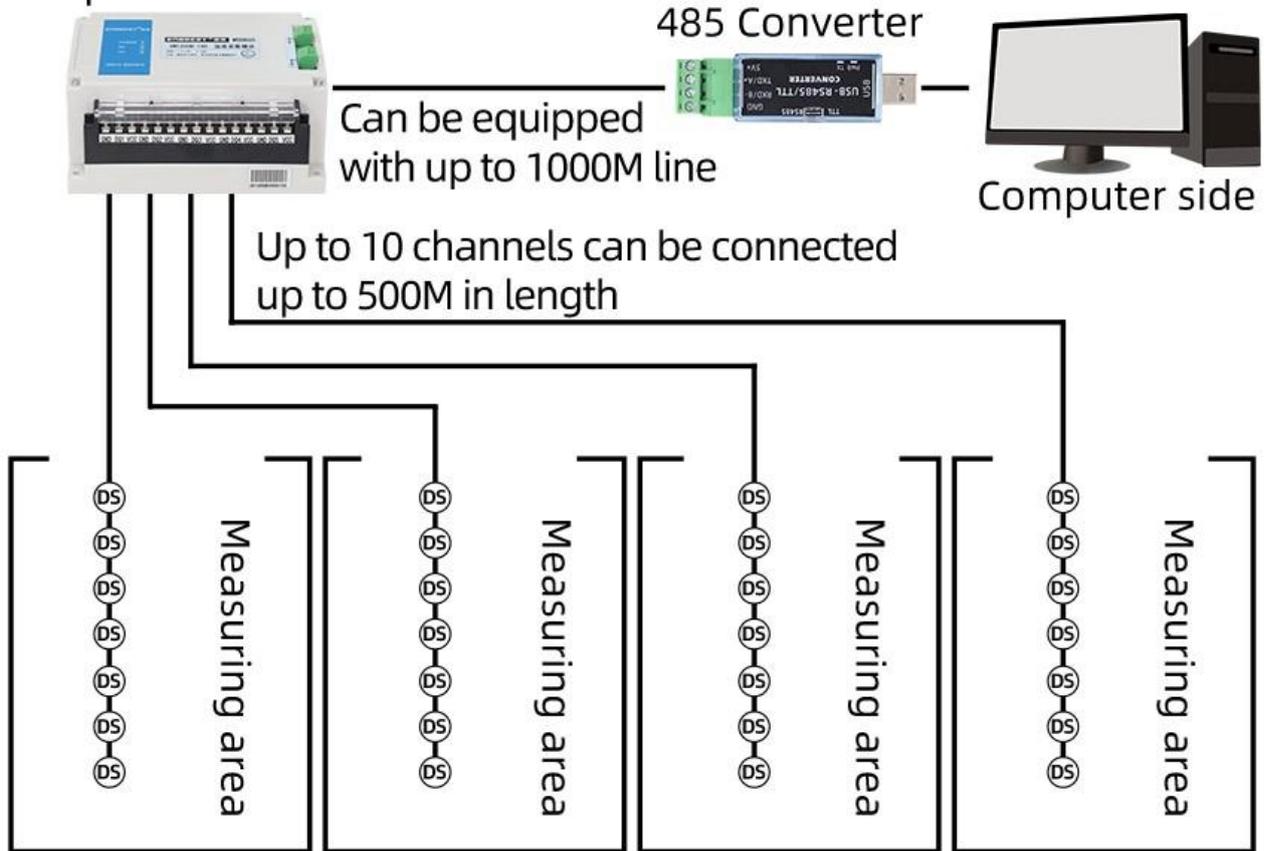

Ⓧ :The icon is DS18B20 probe.

Each channel can be connected with ≤ 100 probes

Multi-module

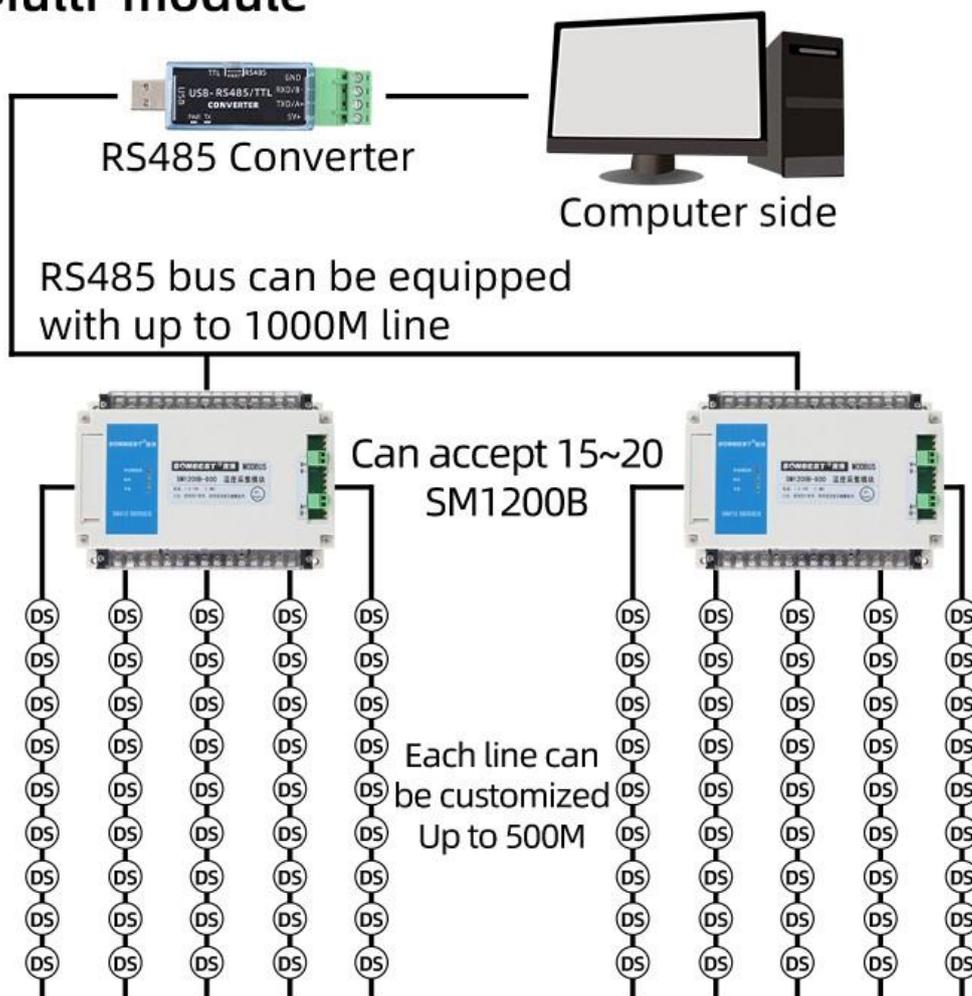

Ⓛ :The icon is DS18B20 probe.

Each channel can be connected with ≤ 100 probes

Product List



SM1200B-600
Temperature Acquisition Module



Warm Reminder Card



Certificate

Communication Protocol

The product uses RS485 MODBUS-RTU standard protocol format, all operation or reply commands are hexadecimal data. The default device address is 1 when the device leaves the factory, and the module or NON-Recorder default baud rate is 9600,8,n,1 ,but data recorder default baud rate is 115200 .

1. Read data (function code 0x03)

The query frame (hexadecimal) is used to query the data of each measuring point or channel. For the multi-channel DS18B20 temperature module, since each channel supports a large number of points, each query frame There is also a limit on the length of reply bytes, so the device is designed to query data by channel. The device is divided into 10 channels, each channel supports a maximum of 60 measuring points, sending example: query 1 #All measuring point data on channel 1 of the device, the host computer sends the command: 01 03 01 01 00 3C 15 E7 .

Address	Function Code	Start Address	Data Length	Check Code
01	03	01 01	00 3C	15 E7

For the correct query frame, the device will respond with data: 01 03 78 00 79 00 7A 00 7B 00 7C 00 7D 00 7E 00 7F 00 80 00 81 00 82 00 83 00 84 00 85 00 86 00 87 00 88 00 89 00 8A 00 8B 00 8C 00 8D 00 8E 00 8F 00 90 00 91 00 92 00 93 00 94 00 95 00 96 00 97 00 98 00 99 00 9A 00 9B 00 9C 00 9D 00 9E 00 9F 00 A0 00 A1 00 A2 00 A3 00 A4 00 A5 00 A6 00 A7 00 A8 00 A9 00 AA 00 AB 00 AC 00 AD 00 AE 00 AF 00 B0 00 B1 00 B2 00 B3 00 B4 2C 69 , response format: address, function code, length, data 1, data 2,..., data n, CRC16 calibration Verification code.

Because the display resolution of the module is 0.01, take the value of data 1 as an example, if the value is 121, then 121 is divided by the magnification 100, and the actual data value is 1.21 degrees. In practical applications, each data value It occupies two bytes, that is, an integer variable, and the actual

value is divided by 100 on the basis of this value. When the data is BA D2, that is, when -177.10 is displayed, it indicates that no sensor is connected. When the data is B4 92 , that is, when -193.10 is displayed, it means that the number on the bus does not have the correct serial number

2. Common data address table

In order to query the data of the standby channel, the node address can be addressed. The device queries data by There are 10 channels, and only 10 query commands are used to find out all the data of the device. The relationship between the starting address of each channel and the 4xxxx address in the configuration software is shown in the table, and its basic calculation method is: $n * 256 + 02$, where n is the channel number. For example, the register at position 1 of channel 1 is 40258.

Configuration Address	Register Address	Register Description	Data Type	Value Range
40258	01 01	1CH 1#PTemperature	Read Only	0~65535
40259	01 02	1CH 2#PTemperature	Read Only	0~65535
.....	(1 Omission of mid-channel measurement points)
40318	01 3C	1CH 60#PTemperature	Read Only	0~65535
40514	02 01	2CH 1#PTemperature	Read Only	0~65535
40515	02 02	2CH 2#PTemperature	Read Only	0~65535
.....	(2 Omission of mid-channel measurement points)
40574	02 3C	2CH 60#PTemperature	Read Only	0~65535
----	----	Middle channel omitted)	----	----
42562	03 01	10CH 1#PTemperature	Read Only	0~65535
42563	03 02	10CH 2#PTemperature	Read Only	0~65535
.....	(10 Omission of mid-channel measurement points)
42622	03 3C	10CH 60#PTemperature	Read Only	0~65535

3 Modify device address and baud rate

(1) Modify device address

The device sets the device address and baud rate through the dial switch on the left side of the product. In the application, when multiple machines are required to be networked, the device addresses in the network cannot be the same, so the user needs to change the device Address, the address range that can be changed by the device is 1-63. The address of the device can be changed by DIP switch S1. Dial the DIP switch to [ON] to indicate 1, and the 1-6 segments of the DIP switch S1 are related to the address. The relevant system is shown in the following table:

Segment 6	Segment 5	Segment 4	Segment 3	Segment 2	Segment 1	Address value
0	0	0	0	0	0	1
0	0	0	0	0	0	2
0	0	0	0	0	0	3
0	0	0	0	0	0	4
...	n
1	1	1	1	1	1	63

(2) Modify the baud rate

The baud rate setting is realized by the first 3 segments of the DIP switch S2. The fourth segment of S2 is not enabled and can be pulled to the 0 position. As shown in the figure on the right, the DIP switch is dialed to [ON] means 1, and pulling it to the side of the number means 0, the meaning is as follows.

Segment 3	Segment 2	Segment 1	Baud Rate
0	0	0	9600
0	0	1	9600
0	1	0	4800

Disclaimer

This document provides all information about the product, does not grant any license to intellectual property, does not express or imply, and prohibits any other means of granting any intellectual property rights, such as the statement of sales terms and conditions of this product, other issues. No liability is assumed. Furthermore, our company makes no warranties, express or implied, regarding the sale and use of this product, including the suitability for the specific use of the product, the marketability or the infringement liability for any patent, copyright or other intellectual property rights, etc. Product specifications and product descriptions may be modified at any time without notice.

Contact Us

Company: Shanghai Sonbest Industrial Co., Ltd

Address: Building 8, No.215 North east road, Baoshan District, Shanghai, China

Web: <http://www.sonbest.com>

Web: <http://www.sonbus.com>

SKYPE: soobuu

Email: sale@sonbest.com

Tel: 86-021-51083595 / 66862055 / 66862075 / 66861077