

SM3713B

Imported probe high temperature temperature and humidity sensor

User Manual

File Version: V25.6.10



SM3713B using the standard ,easy access to PLC, DCS and other instruments or systems for monitoring temperature,humidity state quantities.The internal use of high-precision sensing core and related devices to ensure high reliability and excellent long-term stability,can be customized

RS232,RS485,CAN,4-20mA,DC0~5V\10V,ZIGBEE,Lora,WIFI,GPRS and other output methods.

Technical Parameters


| Technical parameter | Parameter value |
|--------------------------------|-----------------------------|
| Brand | SONBEST |
| Temperature measuring range | -30℃~80℃ |
| Temperature measuring accuracy | ±0.5℃ @25℃ |
| Humidity measuring range | 0~100%RH |
| Humidity accuracy | ±3%RH @25℃ |
| Interface | RS485/4-20mA/DC0-5V/DC0-10V |
| Power | DC12~24V 1A |
| Running temperature | -30~80℃ |
| Working humidity | 5%RH~90%RH |
| | |

Product Selection

Product Design RS485,4-20mA,DC0-5V,DC0-10V Multiple output methods, the products are divided into the following models depending on the output method.


| Product model | output method |
|---------------|---------------|
| SM3713B | RS485 总线 |
| SM3713M | 4-20mA |
| SM3713V5 | DC0-5V |
| SM3713V10 | DC0-10V |

Product Size

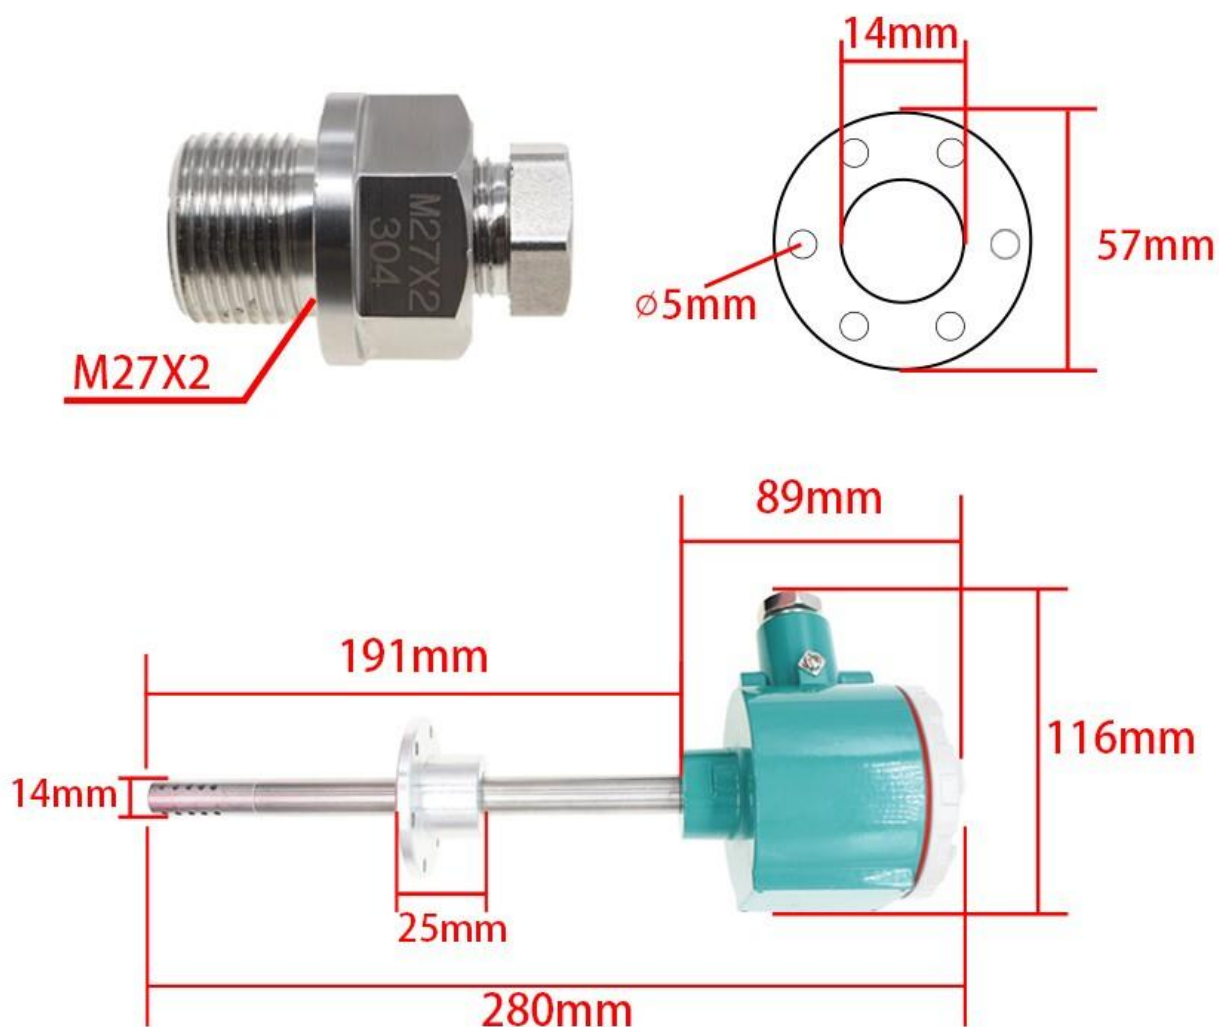

PRODUCT STRUCTURE

Depending on your needs, choose kits with different structures

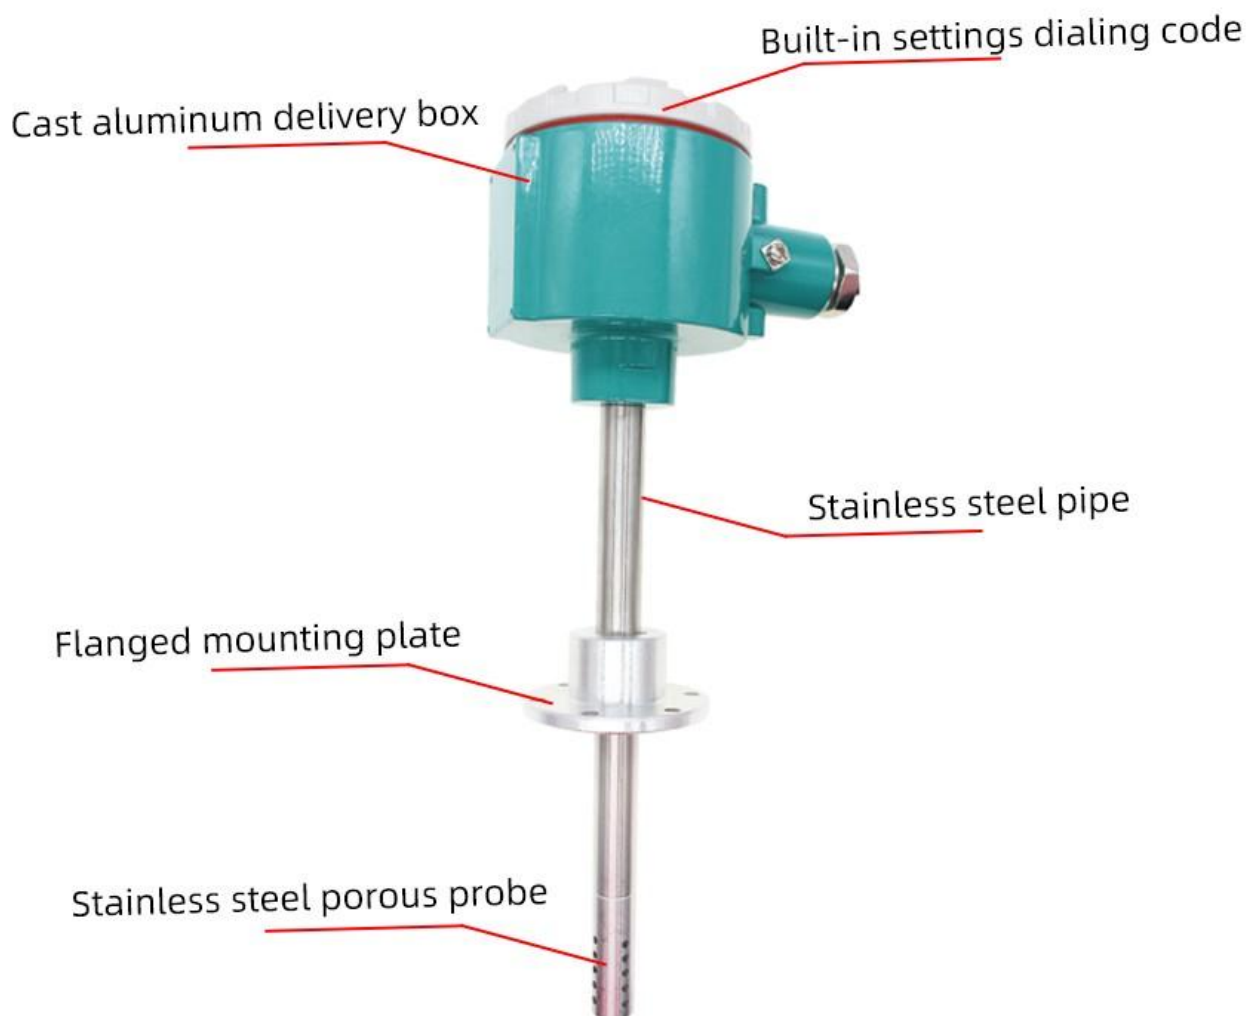

WIRING METHOD

PLEASE WIRE ACCORDING TO THE WIRING MARK

| SM3713B | | SM3713M | |
|-------------------------------------|---------------------------|----------------|---------------------------|
| RS485 communication (no dialing) | | 4~20mA current | |
| A+ | RS485 A+ | H/A+ | Temperature signal output |
| B- | RS485 B- | GND | PWR- |
| V- | PWR- | V+ | PWR+ |
| V+ | PWR+ | T/B- | Temperature signal output |
| SM3713V | | | |
| 0~5/0~10V voltage | | | |
| VH | Temperature signal output | | |
| V- | PWR- | | |
| V+ | PWR+ | | |
| VT | Temperature signal output | | |

※Note: When wiring, the positive and negative poles are supplied first, and then the signal line is connected; Models that are not marked "No dialing" have dialing codes.

With DIP model switch setting

| Paragraph 1 | Paragraph 2 | Measuring range |
|-------------|-------------|-----------------|
| OFF | OFF | 0~50℃ |
| OFF | ON | -20~80℃ |
| ON | OFF | -40~60℃ |
| ON | ON | CUSTOM |

※The temperature range can be adjusted by dialing the code on site, and the default temperature range is 0~50℃
RS485 does not have dialing function and needs to be set up in software

In the case of broken wires, wire the wires as shown in the figure. If the product itself has no leads, the core color is for reference.

How to use?

PLACE OF APPLICATION ▼

High temperature temperature and humidity sensor can be widely used in environmental monitoring, agricultural production, warehouse storage, production workshop, construction engineering and other measurement fields, heat source heat pump, machine room workshop, library, museum, office, archive room and other indoor temperature measurement fields



WAREHOUSE
STORAGE



ENVIRONMENTAL
MONITORING



AGRICULTURAL
PRODUCTION



PRODUCTION
WORKSHOP




CONSTRUCTION




FARMING
ENVIRONMENT

Application solution


■ RS485 communication ■

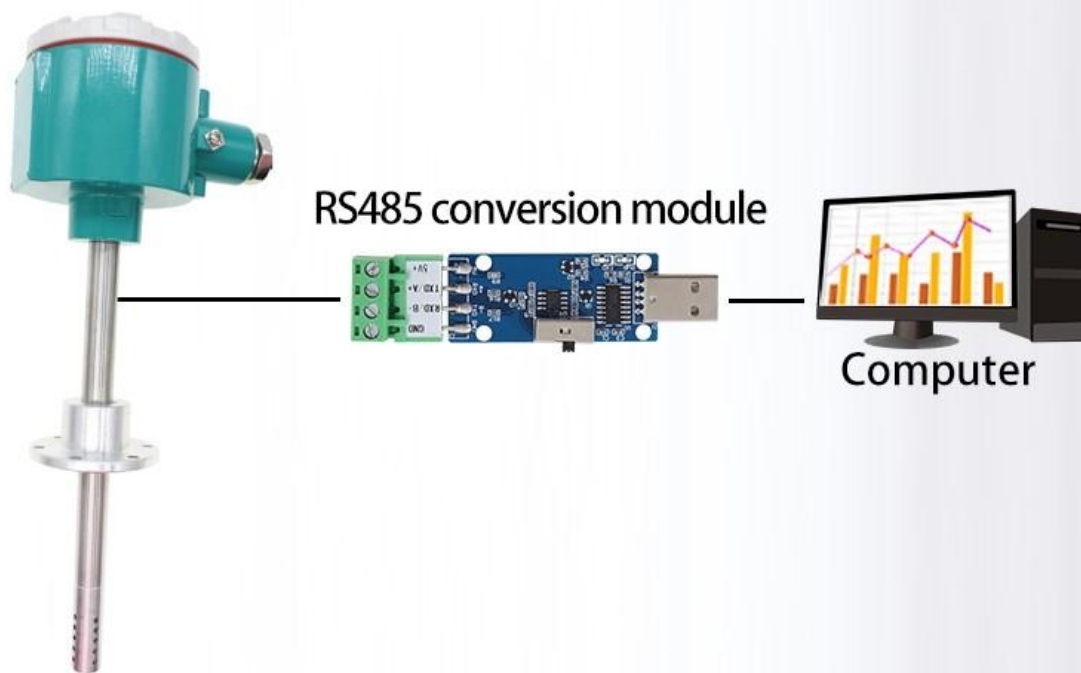

■ 4~20mA current ■

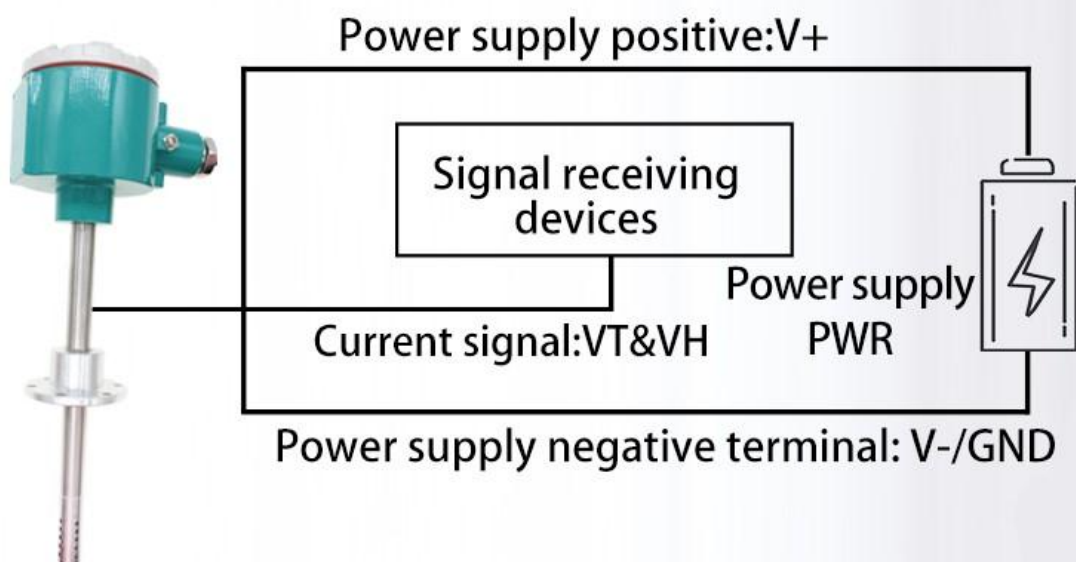

■ DC0~5V/10V voltage ■

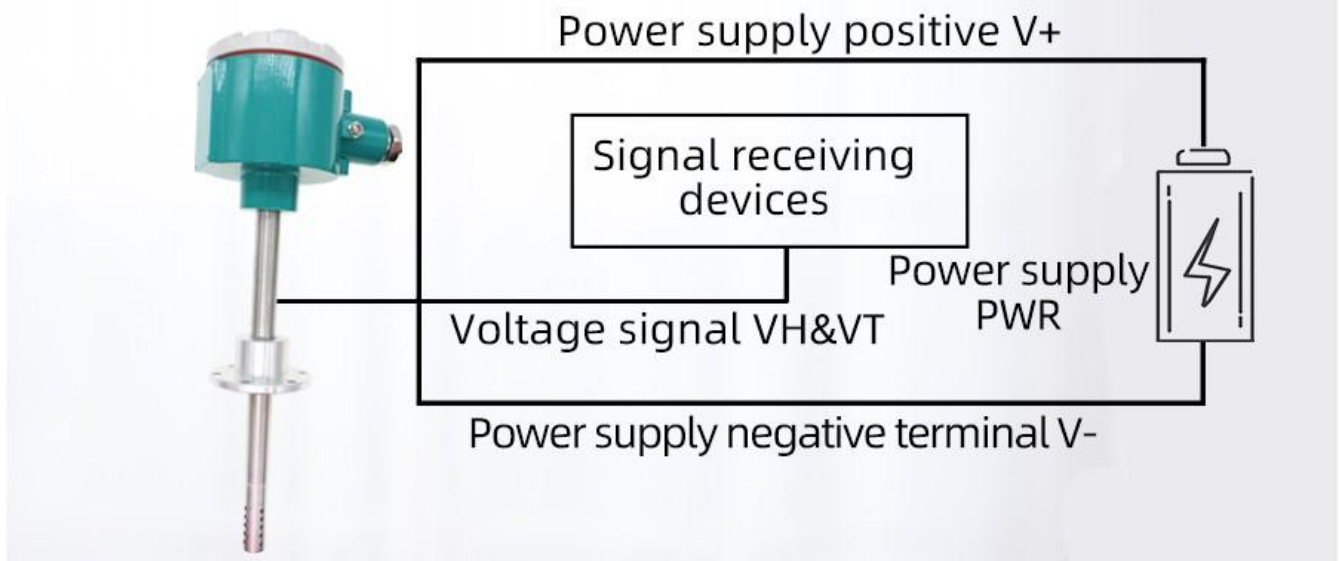

Product List



High temperature temperature and humidity sensor



Reminder card



Certificate

Communication Protocol

The product uses the RS485 MODBUS-RTU standard protocol format, and all operation or reply commands are in hexadecimal data. When the device leaves the factory, the default device address is 1, and the default baud rate is: for modules and non-recording instruments: 9600, 8, n, 1 (for the recorder

series products, the default is: 115200, 8, n, 1).

1. Read data (Function code 0x03)

The inquiry frame (in hexadecimal). Example of sending: To query 1 piece of data of device No. 1, the host computer sends the command: 01 03 00 00 00 02 C4 0B .

| Address | Function code | Starting address | Data length | Checksum |
|---------|---------------|------------------|-------------|----------|
| 01 | 03 | 00 00 | 00 02 | C4 0B |

For a correct inquiry frame, the device will respond with data: 01 03 04 02 19 00 00 2A 4C , and the response format is:

| Address | Function code | Length | Data 1 | Data 2 | Checksum |
|---------|---------------|--------|--------|--------|----------|
| 01 | 03 | 04 | 02 18 | 02 19 | 2A 4C |

Data description: The data in the command is in hexadecimal. Taking Data 1 as an example, 02 18 converted to decimal value is 536. Assuming the data magnification factor is 100, then the true value is $536/100 = 5.36$, and the others can be deduced by analogy.

2. Common Data Address Table

| Configuration Address | Register Address | Register Description | Data Type | Value Range |
|-----------------------|------------------|----------------------------------|------------|--------------|
| 40001 | 00 00 | temperature | Read Only | 0~65535 |
| 40002 | 00 01 | humidity | Read Only | 0~65535 |
| 40101 | 00 64 | Model Code | Read-only | 0~59999 |
| 40102 | 00 65 | Total Number of Measuring Points | Read-only | 1~1600 |
| 40103 | 00 66 | Device Address | Read/Write | 1~249 |
| 40104 | 00 67 | Baud Rate | Read/Write | 0~6 |
| 40105 | 00 68 | Communication Mode | Read/Write | 1 Query |
| 40106 | 00 69 | Protocol Type | Read/Write | 1 MODBUS-RTU |

3. Read and modify the device address

(1) Read or query the device address

If you don't know the current device address and there is only one device on the bus, you can query the device address through the command FA 03 00 66 00 01 71 9E .

| Device address | Function code | Starting address | Data length | Checksum |
|----------------|---------------|------------------|-------------|----------|
| FA | 03 | 00 66 | 00 01 | 71 9E |

FA, which is 250, is the universal address. When you don't know the address, you can use 250 to obtain the real device address. 00 66 is the register of the device address.

For a correct query command, the device will respond. For example, the response data is: 01 03 02 00 01 79 84. The format analysis is shown in the following table:

| Device address | Function code | Starting address | Address ID | Checksum |
|----------------|---------------|------------------|------------|----------|
| 01 | 03 | 02 | 00 01 | 79 84 |

In the response data, the first byte 01 represents the real address of the current device.

(2) Change the device address

For example, if the current device address is 1 and you want to change it to 02, the command is: 01 06 00 66 00 02 E8 14 .

| Device address | Function code | Register address | Target address | Checksum |
|----------------|---------------|------------------|----------------|----------|
|----------------|---------------|------------------|----------------|----------|

| | | | | |
|----|----|-------|-------|-------|
| 01 | 06 | 00 66 | 00 02 | E8 14 |
|----|----|-------|-------|-------|

After the change is successful, the device will return the information: 02 06 00 66 00 02 E8 27. The format analysis is shown in the following table:

| Device address | Function code | Register address | Target address | Checksum |
|----------------|---------------|------------------|----------------|----------|
| 02 | 06 | 00 66 | 00 02 | E8 27 |

In the response data, after the modification is successful, the first byte is the new device address. Generally, after the device address is changed, it takes effect immediately. At this time, users need to modify the query commands in their own software accordingly.

4. Read and modify the baud rate

(1) Read the baud rate

The default factory baud rate of the device is 9600. If you need to change it, you can perform the change operation according to the following table and the corresponding communication protocol. For example, to read the baud rate ID of the current device, the command is: 01 03 00 67 00 01 35 D5 . The format analysis is as follows.

| Device address | Function code | Starting address | Data length | Checksum |
|----------------|---------------|------------------|-------------|----------|
| 01 | 03 | 00 67 | 00 01 | 35 D5 |

Read the baud rate code of the current device. Baud rate codes: 1 for 2400; 2 for 4800; 3 for 9600; 4 for 19200; 5 for 38400; 6 for 115200.

For a correct query command, the device will respond. For example, the response data is: 01 03 02 00 03 F8 45. The format analysis is shown in the following table:

| Device address | Function code | Data length | Baud rate code | Checksum |
|----------------|---------------|-------------|----------------|----------|
| 01 | 03 | 02 | 00 03 | F8 45 |

According to the baud rate code, 03 represents 9600, which means the current baud rate of the device is 9600.

(2) Change the baud rate

For example, to change the baud rate from 9600 to 38400, that is, change the code from 3 to 5, the command is: 01 06 00 67 00 05 F8 16 .

| Device address | Function code | Register address | Target baud rate | Checksum |
|----------------|---------------|------------------|------------------|----------|
| 01 | 06 | 00 67 | 00 05 | F8 16 |

Change the baud rate from 9600 to 38400, that is, change the code from 3 to 5. The new baud rate will take effect immediately. At this time, the device will stop responding, and the query command for the device's baud rate needs to be modified accordingly.

5. Read and modify the correction value (valid for some products)

(1) Read the correction value

When there is an error between the data and the reference standard, we can reduce the display error by adjusting the "correction value". The adjustable range of the correction difference is plus or minus 1000, that is, the value range is 0 - 1000 or 64535 - 65535. For example, when the displayed value is 100 less than the actual value, we can correct it by adding 100. The command is: 01 03 00 6B 00 01 F5 D6 . In the command, 100 is the hexadecimal value 0x64. If you need to decrease the value, you can set a negative value. For example, - 100 corresponds to the hexadecimal value FF 9C. The calculation method is 100 - 65535 = 65435, and then convert it to hexadecimal, which is 0x FF 9C. The device correction value starts from 00 6B. We take the first parameter as an example for illustration. When there are multiple parameters, the methods for reading and modifying the correction value are the same.

| Device address | Function code | Starting address | Data length | Checksum |
|----------------|---------------|------------------|-------------|----------|
|----------------|---------------|------------------|-------------|----------|

| | | | | |
|----|----|-------|-------|-------|
| 01 | 03 | 00 6B | 00 01 | F5 D6 |
|----|----|-------|-------|-------|

For a correct query command, the device will respond. For example, the response data is: 01 03 02 00 64 B9 AF. The format analysis is shown in the following table:

| Device address | Function code | Data length | Correction value | Checksum |
|----------------|---------------|-------------|------------------|----------|
| 01 | 03 | 02 | 00 64 | B9 AF |

In the response data, the first byte 01 represents the real address of the current device, and 00 6B is the register for the correction value of the first state variable. If the device has multiple parameters, the operation methods for other parameters are the same. Generally, temperature and humidity sensors have this parameter, while light sensors usually do not.

(2) Change the correction value

For example, if the current state variable value is too small and we want to increase its real - value by 1, the command to correct the current value by adding 100 is: 01 06 00 6B 00 64 F9 FD .

| Device address | Function code | Register address | Target address | Checksum |
|----------------|---------------|------------------|----------------|----------|
| 01 | 06 | 00 6B | 00 64 | F9 FD |

After the operation is successful, the device will return the information: 01 06 00 6B 00 64 F9 FD. After the change is successful, the parameter takes effect immediately.

1. temperature and current computing relationship

For example, the range is 0~50℃, the analog output is 4~20mA current signal, temperature and current The calculation relationship is as shown in the formula: $C = (A2-A1) * (X-B1) / (B2-B1) + A1$, where A2 is temperature range upper limit, A1 is the lower limit of the range, B2 is current output range upper limit, B1 is the lower limit, X is the currently read temperature value, and C is the calculated current value. The list of commonly used values is as follows:

| current(mA) | temperatureValue (℃) | Calculation Process |
|-------------|----------------------|---------------------------------|
| 4 | 0.0 | $(50-0)*(4-4) \div (20-4) + 0$ |
| 5 | 3.1 | $(50-0)*(5-4) \div (20-4) + 0$ |
| 6 | 6.3 | $(50-0)*(6-4) \div (20-4) + 0$ |
| 7 | 9.4 | $(50-0)*(7-4) \div (20-4) + 0$ |
| 8 | 12.5 | $(50-0)*(8-4) \div (20-4) + 0$ |
| 9 | 15.6 | $(50-0)*(9-4) \div (20-4) + 0$ |
| 10 | 18.8 | $(50-0)*(10-4) \div (20-4) + 0$ |
| 11 | 21.9 | $(50-0)*(11-4) \div (20-4) + 0$ |
| 12 | 25.0 | $(50-0)*(12-4) \div (20-4) + 0$ |
| 13 | 28.1 | $(50-0)*(13-4) \div (20-4) + 0$ |
| 14 | 31.3 | $(50-0)*(14-4) \div (20-4) + 0$ |
| 15 | 34.4 | $(50-0)*(15-4) \div (20-4) + 0$ |
| 16 | 37.5 | $(50-0)*(16-4) \div (20-4) + 0$ |
| 17 | 40.6 | $(50-0)*(17-4) \div (20-4) + 0$ |
| 18 | 43.8 | $(50-0)*(18-4) \div (20-4) + 0$ |
| 19 | 46.9 | $(50-0)*(19-4) \div (20-4) + 0$ |
| 20 | 50.0 | $(50-0)*(20-4) \div (20-4) + 0$ |

As shown in the above formula, when measuring 8mA, current current is 16.5℃.

2. humidity and current computing relationship

For example, the range is 0~100%RH, the analog output is 4~20mA current signal, humidity and

current The calculation relationship is as shown in the formula: $C = (A2 - A1) * (X - B1) / (B2 - B1) + A1$, where A2 is humidity range upper limit, A1 is the lower limit of the range, B2 is current output range upper limit, B1 is the lower limit, X is the currently read humidity value, and C is the calculated current value. The list of commonly used values is as follows:

| current(mA) | humidityValue (%RH) | Calculation Process |
|-------------|---------------------|----------------------------------|
| 4 | 0.0 | $(100-0)*(4-4) \div (20-4) + 0$ |
| 5 | 6.3 | $(100-0)*(5-4) \div (20-4) + 0$ |
| 6 | 12.5 | $(100-0)*(6-4) \div (20-4) + 0$ |
| 7 | 18.8 | $(100-0)*(7-4) \div (20-4) + 0$ |
| 8 | 25.0 | $(100-0)*(8-4) \div (20-4) + 0$ |
| 9 | 31.3 | $(100-0)*(9-4) \div (20-4) + 0$ |
| 10 | 37.5 | $(100-0)*(10-4) \div (20-4) + 0$ |
| 11 | 43.8 | $(100-0)*(11-4) \div (20-4) + 0$ |
| 12 | 50.0 | $(100-0)*(12-4) \div (20-4) + 0$ |
| 13 | 56.3 | $(100-0)*(13-4) \div (20-4) + 0$ |
| 14 | 62.5 | $(100-0)*(14-4) \div (20-4) + 0$ |
| 15 | 68.8 | $(100-0)*(15-4) \div (20-4) + 0$ |
| 16 | 75.0 | $(100-0)*(16-4) \div (20-4) + 0$ |
| 17 | 81.3 | $(100-0)*(17-4) \div (20-4) + 0$ |
| 18 | 87.5 | $(100-0)*(18-4) \div (20-4) + 0$ |
| 19 | 93.8 | $(100-0)*(19-4) \div (20-4) + 0$ |
| 20 | 100.0 | $(100-0)*(20-4) \div (20-4) + 0$ |

As shown in the above formula, when measuring 8mA, current current is 29%RH.

1. temperature and DC0-5Vvoltage computing relationship

For example, the range is 0~50℃, the analog output is 0~5V DC0-5Vvoltage signal, temperature and DC0-5Vvoltage The calculation relationship is as shown in the formula: $C = (A2 - A1) * (X - B1) / (B2 - B1) + A1$, where A2 is temperature range upper limit, A1 is the lower limit of the range, B2 is DC0-5Vvoltage output range upper limit, B1 is the lower limit, X is the currently read temperature value, and C is the calculated DC0-5Vvoltage value. The list of commonly used values is as follows:

| DC0-5Vvoltage(V) | temperatureValue (℃) | Calculation Process |
|------------------|----------------------|-------------------------------|
| 0 | 0.0 | $(50-0)*(0-0) \div (5-0) + 0$ |
| 1 | 10.0 | $(50-0)*(1-0) \div (5-0) + 0$ |
| 2 | 20.0 | $(50-0)*(2-0) \div (5-0) + 0$ |
| 3 | 30.0 | $(50-0)*(3-0) \div (5-0) + 0$ |
| 4 | 40.0 | $(50-0)*(4-0) \div (5-0) + 0$ |
| 5 | 50.0 | $(50-0)*(5-0) \div (5-0) + 0$ |

As shown in the above formula, when measuring 2.5V, current DC0-5Vvoltage is 25℃.

2. humidity and DC0-5Vvoltage computing relationship

For example, the range is 0~100%RH, the analog output is 0~5V DC0-5Vvoltage signal, humidity and DC0-5Vvoltage The calculation relationship is as shown in the formula: $C = (A2 - A1) * (X - B1) / (B2 - B1) + A1$, where A2 is humidity range upper limit, A1 is the lower limit of the range, B2 is DC0-5Vvoltage output range upper limit, B1 is the lower limit, X is the currently read humidity value, and C is the calculated DC0-5Vvoltage value. The list of commonly used values is as follows:

| DC0-5Vvoltage(V) | humidityValue (%RH) | Calculation Process |
|------------------|---------------------|----------------------------|
| 0 | 0.0 | $(100-0)*(0-0)\div(5-0)+0$ |
| 1 | 20.0 | $(100-0)*(1-0)\div(5-0)+0$ |
| 2 | 40.0 | $(100-0)*(2-0)\div(5-0)+0$ |
| 3 | 60.0 | $(100-0)*(3-0)\div(5-0)+0$ |
| 4 | 80.0 | $(100-0)*(4-0)\div(5-0)+0$ |
| 5 | 100.0 | $(100-0)*(5-0)\div(5-0)+0$ |

As shown in the above formula, when measuring 2.5V, current DC0-5Vvoltage is 50%RH.

1. temperature and DC0-10Vvoltage computing relationship

For example, the range is 0~50℃, the analog output is 0~10V DC0-10Vvoltage signal, temperature and DC0-10Vvoltage The calculation relationship is as shown in the formula: $C = (A2-A1) * (X-B1) / (B2-B1) + A1$, where A2 is temperature range upper limit, A1 is the lower limit of the range, B2 is DC0-10Vvoltage output range upper limit, B1 is the lower limit, X is the currently read temperature val

| DC0-10Vvoltage(V) | temperatureValue (℃) | Calculation Process |
|-------------------|----------------------|-----------------------------|
| 0 | 0.0 | $(50-0)*(0-0)\div(10-0)+0$ |
| 1 | 5.0 | $(50-0)*(1-0)\div(10-0)+0$ |
| 2 | 10.0 | $(50-0)*(2-0)\div(10-0)+0$ |
| 3 | 15.0 | $(50-0)*(3-0)\div(10-0)+0$ |
| 4 | 20.0 | $(50-0)*(4-0)\div(10-0)+0$ |
| 5 | 25.0 | $(50-0)*(5-0)\div(10-0)+0$ |
| 6 | 30.0 | $(50-0)*(6-0)\div(10-0)+0$ |
| 7 | 35.0 | $(50-0)*(7-0)\div(10-0)+0$ |
| 8 | 40.0 | $(50-0)*(8-0)\div(10-0)+0$ |
| 9 | 45.0 | $(50-0)*(9-0)\div(10-0)+0$ |
| 10 | 50.0 | $(50-0)*(10-0)\div(10-0)+0$ |

ue, and C is the calculated DC0-10Vvoltage value. The list of commonly used values is as follows:

As shown in the above formula, when measuring 5V, current DC0-10Vvoltage is 25℃.

2. humidity and DC0-10Vvoltage computing relationship

For example, the range is 0~100%RH, the analog output is 0~10V DC0-10Vvoltage signal, humidity and DC0-10Vvoltage The calculation relationship is as shown in the formula: $C = (A2-A1) * (X-B1) / (B2-B1) + A1$, where A2 is humidity range upper limit, A1 is the lower limit of the range, B2 is DC0-10Vvoltage output range upper limit, B1 is the lower limit, X is the currently read humid

| DC0-10Vvoltage(V) | humidityValue (%RH) | Calculation Process |
|-------------------|---------------------|-----------------------------|
| 0 | 0.0 | $(100-0)*(0-0)\div(10-0)+0$ |
| 1 | 10.0 | $(100-0)*(1-0)\div(10-0)+0$ |
| 2 | 20.0 | $(100-0)*(2-0)\div(10-0)+0$ |
| 3 | 30.0 | $(100-0)*(3-0)\div(10-0)+0$ |
| 4 | 40.0 | $(100-0)*(4-0)\div(10-0)+0$ |
| 5 | 50.0 | $(100-0)*(5-0)\div(10-0)+0$ |
| 6 | 60.0 | $(100-0)*(6-0)\div(10-0)+0$ |
| 7 | 70.0 | $(100-0)*(7-0)\div(10-0)+0$ |
| 8 | 80.0 | $(100-0)*(8-0)\div(10-0)+0$ |

| | | |
|----|-------|------------------------------|
| 9 | 90.0 | $(100-0)*(9-0)\div(10-0)+0$ |
| 10 | 100.0 | $(100-0)*(10-0)\div(10-0)+0$ |

ity value, and C is the calculated DC0-10Vvoltage value. The list of commonly used values is as follows:

As shown in the above formula, when measuring 5V, current DC0-10Vvoltage is 50%RH。

Disclaimer

This document provides all information about the product, does not grant any license to intellectual property, does not express or imply, and prohibits any other means of granting any intellectual property rights, such as the statement of sales terms and conditions of this product, other issues. No liability is assumed. Furthermore, our company makes no warranties, express or implied, regarding the sale and use of this product, including the suitability for the specific use of the product, the marketability or the infringement liability for any patent, copyright or other intellectual property rights, etc. Product specifications and product descriptions may be modified at any time without notice.

Contact Us

Company: Shanghai Sonbest Industrial Co., Ltd

Address: Building 8, No.215 North east road, Baoshan District, Shanghai, China

Web: <http://www.sonbest.com>

Web: <http://www.sonbus.com>

SKYPE: soobuu

Email: sale@sonbest.com

Tel: 86-021-51083595 / 66862055 / 66862075 / 66861077