

KM53M86

4-20mA 电流型铝材户外 RS485 风速传感器

产品使用手册

文件版本: V22.9.9



KM53M86 采用工业通用标准接口，方便接入 PLC，DCS 等各种仪表或系统，用于监测风速等状态量。内部使用了较高精度的传感内核及相关器件，确保产品具有较高的可靠性与卓越的长期稳定性，可定制 RS232、RS485、CAN、4-20mA、DC0~5V\10V、ZIGBEE、Lora、WIFI、GPRS、NB-IOT 等多种输出方式。

技术参数



技术参数	参数值
品牌	KLHA/快乐海岸
风速量程	0~30m/s
启动风速	0.2m/s
风速测量精度	±3%
外壳材质	铝材
输出方式	RS485/4-20mA/DC0-5V
供电电源	DC12~24V 1A
运行环境温度	-25~80° C

产品选型

产品设计了 RS485, 4-20mA, DC0-5V 多种输出方式，根据输出方式的不同，产品分为以下几种型号。


产品型号	输出方式及供电电压范围
KM53M8B	RS485 总线
KM53M8M	4-20mA
KM53M8V5	DC0-5V


外形尺寸

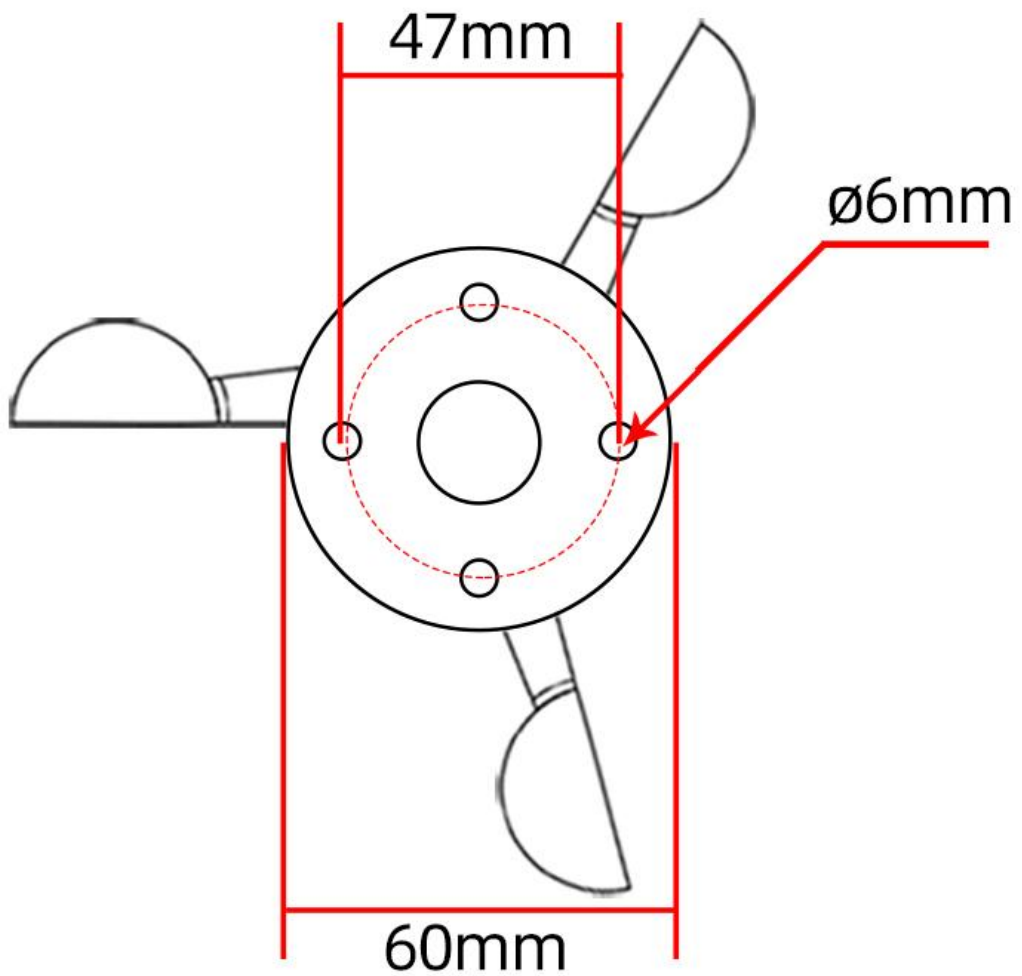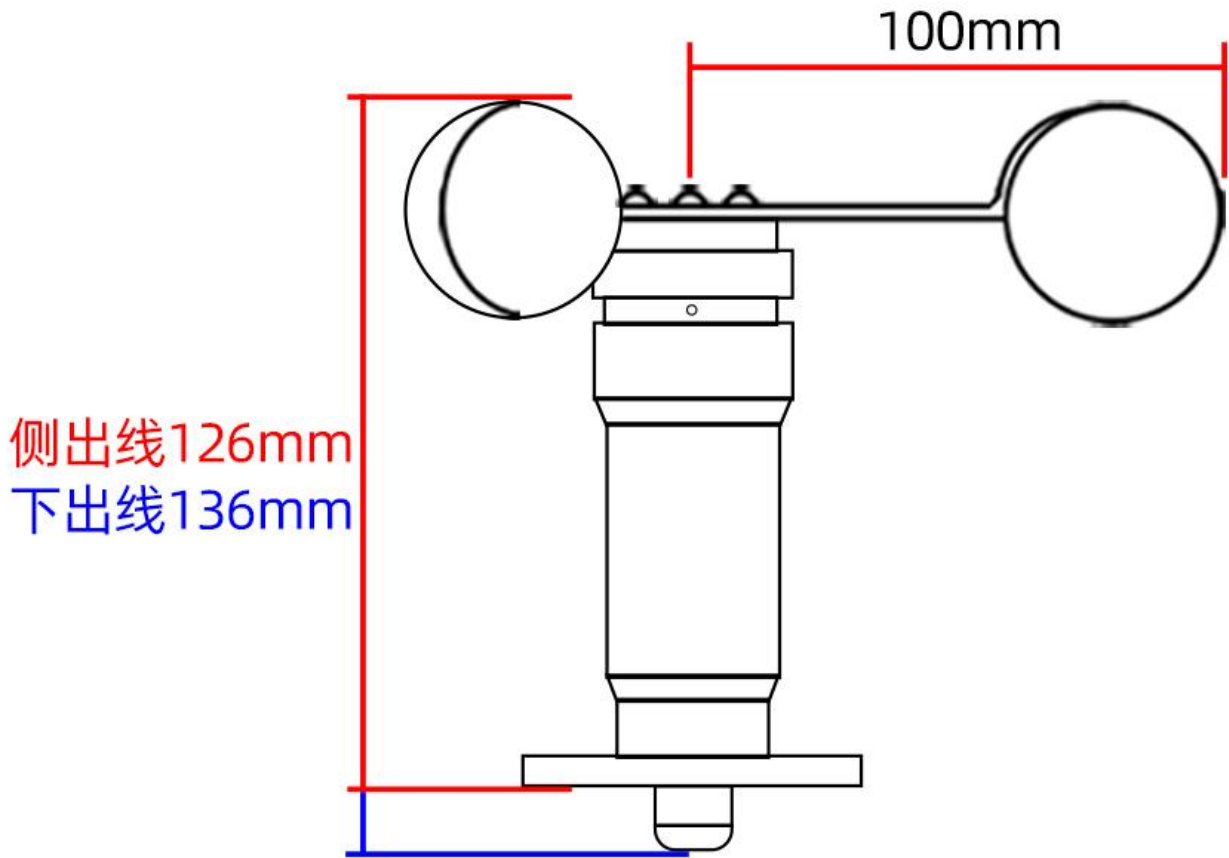


1	6.0	$(30-0) \times (1-0) \div (5-0) + 0$
2	12.0	$(30-0) \times (2-0) \div (5-0) + 0$
3	18.0	$(30-0) \times (3-0) \div (5-0) + 0$
4	24.0	$(30-0) \times (4-0) \div (5-0) + 0$
5	30.0	$(30-0) \times (5-0) \div (5-0) + 0$

As shown in the above formula, when measuring 2.5V, current DC0-5V voltage is 15m/s.

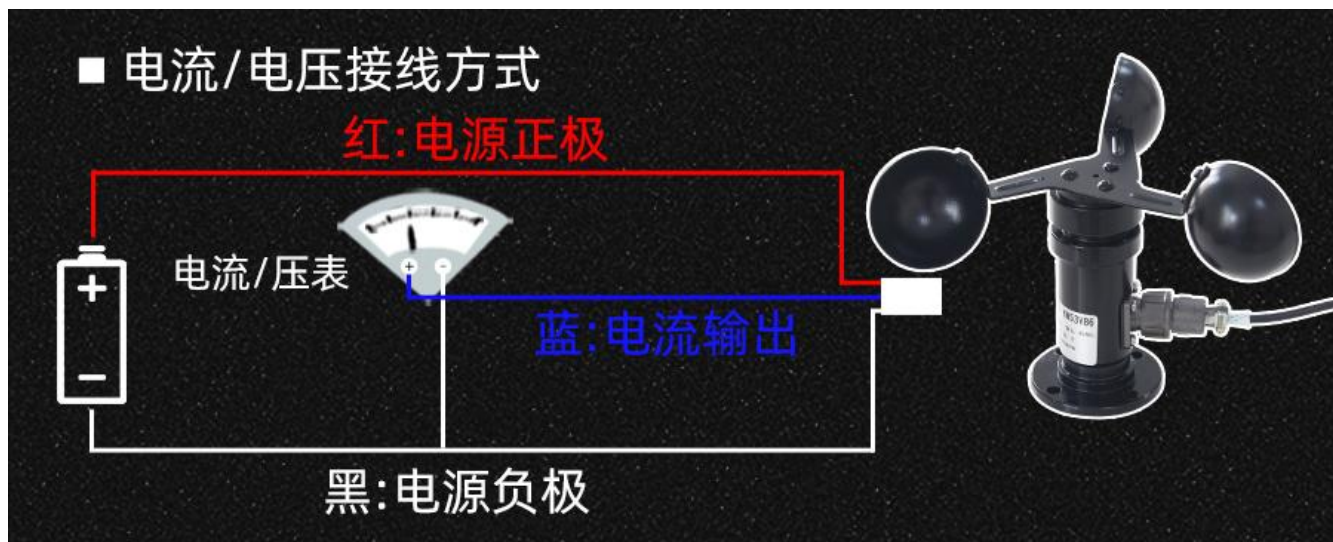

 [src=/upload/samplebook/KM53M86/S01.jpg](#) />

 [src=/upload/samplebook/KM53M86/S02.jpg](#) />

Technical Parameters

Technical parameter	Parameter value
Brand	KLHA
Wind speed range	0~30m/s
Start wind	0.2m/s
Wind speed accuracy	±3%
Shell material	aluminum
Interface	RS485/4-20mA/DC0-5V
Power	DC12~24V 1A
Running temperature	-25~80° C

Product Selection

Product Design RS485, 4-20mA, DC0-5V Multiple output methods, the products are divided into the following models depending on the output method.

Product model	output method
KM53M8B	RS485 总线
KM53M8M	4-20mA
KM53M8V5	DC0-5V


```
fixed;' width=' 100%' ><tbody>
<tr>
<tr><td>Configuration Address</td><td> Register Address</td><td> Register
Description</td><td> Data Type</td><td> Value
Range</td></tr><tr><td>40001</td><td>00 00</td><td>wind speed</td><td>Read
Only</td><td>0~65535</td></tr><tr><td>40101</td><td>00 64</td><td>Model
Code</td><td>Read/Write</td><td>0~65535</td></tr><tr><td>40102</td><td>00
65</td><td> total number of measuring points</td><td> read/write</td><td>
1~20</td></tr><tr><td>40103</td><td>00 66</td><td>device
address</td><td>read/write</td><td>1~249</td></tr><tr><td>40104</td><td>00
67</td><td>baud
rate</td><td>read/write</td><td>0~6</td></tr><tr><td>40105</td><td>00
68</td><td>communication
mode</td><td>read/write</td><td>1~4</td></tr><tr><td>40106</td><td>00
69</td><td>protocol type</td><td>read/write</td><td>1~10</td></tr></tbody></table>
```

For example, the range is 0~30m/s, the analog output is 4~20mA current signal, wind speed and current The calculation relationship is as shown in the formula: $C = (A2-A1) * (X-B1) / (B2-B1) + A1$, where A2 is wind speed range upper limit, A1 is the lower limit of the range, B2 is current output range upper limit, B1 is the lower limit, X is the currently read wind speed value, and C is the calculated current value.

The list of commonly used values is as follows:


```
<table border=1 cellpadding=1 cellspacing=1 style=' margin-left:0px; table-layout:
fixed;' width=' 100%' ><tbody>
<tr>
<tr><td>current (mA)</td><td>wind speedValue (m/s)</td><td> Calculation
Process</td></tr><tr><td>4</td><td>0. 0</td><td>(30-0)*(4-4) ÷ (20-4)+0</td></tr><tr>
<td>5</td><td>1. 9</td><td>(30-0)*(5-4) ÷ (20-4)+0</td></tr><tr><td>6</td><td>3. 8</
td><td>(30-0)*(6-4) ÷ (20-4)+0</td></tr><tr><td>7</td><td>5. 6</td><td>(30-0)*(7-4)
÷ (20-4)+0</td></tr><tr><td>8</td><td>7. 5</td><td>(30-0)*(8-4) ÷ (20-4)+0</td></tr>
<tr><td>9</td><td>9. 4</td><td>(30-0)*(9-4) ÷ (20-4)+0</td></tr><tr><td>10</td><td>1
1. 3</td><td>(30-0)*(10-4) ÷ (20-4)+0</td></tr><tr><td>11</td><td>13. 1</td><td>(30-
0)*(11-4) ÷ (20-4)+0</td></tr><tr><td>12</td><td>15. 0</td><td>(30-0)*(12-4) ÷ (20-4)+
0</td></tr><tr><td>13</td><td>16. 9</td><td>(30-0)*(13-4) ÷ (20-4)+0</td></tr><tr><t
d>14</td><td>18. 8</td><td>(30-0)*(14-4) ÷ (20-4)+0</td></tr><tr><td>15</td><td>20. 6
</td><td>(30-0)*(15-4) ÷ (20-4)+0</td></tr><tr><td>16</td><td>22. 5</td><td>(30-0)*
(16-4) ÷ (20-4)+0</td></tr><tr><td>17</td><td>24. 4</td><td>(30-0)*(17-4) ÷ (20-4)+0</
td></tr><tr><td>18</td><td>26. 3</td><td>(30-0)*(18-4) ÷ (20-4)+0</td></tr><tr><td>1
9</td><td>28. 1</td><td>(30-0)*(19-4) ÷ (20-4)+0</td></tr><tr><td>20</td><td>30. 0</t
d><td>(30-0)*(20-4) ÷ (20-4)+0</td></tr></tbody></table>
```

As shown in the above formula, when measuring 8mA, current current is 11.5m/s.

For example, the range is 0~30m/s, the analog output is 0~5V DC0-5Vvoltage signal, wind speed and DC0-5Vvoltage The calculation relationship is as shown in the formula: $C = (A2-A1) * (X-B1) / (B2-B1) + A1$, where A2 is wind speed range upper limit,

A1 is the lower limit of the range, B2 is DC0-5V voltage output range upper limit, B1 is the lower limit, X is the currently read wind speed value, and C is the calculated DC0-5V voltage value. The list of commonly used values is as follows:

DC0-5V voltage (V)	wind speed Value (m/s)	Calculation Process
0	0.0	$(30-0) * (0-0) \div (5-0) + 0$
1	6.0	$(30-0) * (1-0) \div (5-0) + 0$
2	12.0	$(30-0) * (2-0) \div (5-0) + 0$
3	18.0	$(30-0) * (3-0) \div (5-0) + 0$
4	24.0	$(30-0) * (4-0) \div (5-0) + 0$
5	30.0	$(30-0) * (5-0) \div (5-0) + 0$

As shown in the above formula, when measuring 2.5V, current DC0-5V voltage is 15m/s.

典型应用

<h4>Technical Parameters</h4><hr />

Technical parameter	Parameter value
Brand	KLHA
Wind speed range	0~30m/s
Start wind	0.2m/s
Wind speed accuracy	±3%
Shell material	aluminum
Interface	RS485/4-20mA/DC0-5V
Power	DC12~24V 1A
Running temperature	-25~80° C

<h4>Product Selection</h4><hr />

Product Design RS485, 4-20mA, DC0-5V Multiple output methods, the products are divided into the following models depending on the output method.

Product model	output method
KM53M8B	RS485 总线
KM53M8M	4-20mA
KM53M8V5	DC0-5V

<h4>Product Size</h4><hr />

Description	Data Type	Value
Range		40001
		00 00
		wind speed
Read Only		0~65535
		40101
		00 64
Model Code		Read/Write
		0~65535
		40102
		00 65
		total number of measuring points
		read/write
		1~20
		40103
		00 66
		device address
		read/write
		1~249
		40104
		00 67
		baud rate
		read/write
		0~6
		40105
		00 68
		communication mode
		read/write
		1~4
		40106
		00 69
		protocol type
		read/write
		1~10

For example, the range is 0~30m/s, the analog output is 4~20mA current signal, wind speed and current The calculation relationship is as shown in the formula: $C = (A2-A1) * (X-B1) / (B2-B1) + A1$, where A2 is wind speed range upper limit, A1 is the lower limit of the range, B2 is current output range upper limit, B1 is the lower limit, X is the currently read wind speed value, and C is the calculated current value. The list of commonly used values is as follows:

current (mA)	wind speedValue (m/s)	Calculation
4	0.0	$(30-0)*(4-4) \div (20-4)+0$
5	1.9	$(30-0)*(5-4) \div (20-4)+0$
6	3.8	$(30-0)*(6-4) \div (20-4)+0$
7	5.6	$(30-0)*(7-4) \div (20-4)+0$
8	7.5	$(30-0)*(8-4) \div (20-4)+0$
9	9.4	$(30-0)*(9-4) \div (20-4)+0$
10	11.3	$(30-0)*(10-4) \div (20-4)+0$
11	13.1	$(30-0)*(11-4) \div (20-4)+0$
12	15.0	$(30-0)*(12-4) \div (20-4)+0$
13	16.9	$(30-0)*(13-4) \div (20-4)+0$
14	18.8	$(30-0)*(14-4) \div (20-4)+0$
15	20.6	$(30-0)*(15-4) \div (20-4)+0$
16	22.5	$(30-0)*(16-4) \div (20-4)+0$
17	24.4	$(30-0)*(17-4) \div (20-4)+0$
18	26.3	$(30-0)*(18-4) \div (20-4)+0$
19	28.1	$(30-0)*(19-4) \div (20-4)+0$
20	30.0	$(30-0)*(20-4) \div (20-4)+0$


As shown in the above formula, when measuring 8mA, current current is 11.5m/s.

For example, the range is 0~30m/s, the analog output is 0~5V DC0-5Vvoltage signal, wind speed and DC0-5Vvoltage The calculation relationship is as shown in the formula: $C = (A2-A1) * (X-B1) / (B2-B1) + A1$, where A2 is wind speed range upper limit, A1 is the lower limit of the range, B2 is DC0-5Vvoltage output range upper limit, B1 is the lower limit, X is the currently read wind speed value, and C is the calculated DC0-5Vvoltage value. The list of commonly used values is as follows:


Product Design RS485, 4-20mA, DC0-5V Multiple output methods, the products are divided into the following models depending on the output method.


Product model	output method
KM53M8B	RS485 总线
KM53M8M	4-20mA
KM53M8V5	DC0-5V


Product Size




Why choose this product?









Application solution








How to use?




Pictures









Communication Protocol

The product uses RS485 MODBUS-RTU standard protocol format, all operation or reply commands are hexadecimal data. The default device address is 1 when the device leaves the factory, and the module or NON-Recorder default baud rate is 9600, 8, n, 1, but data recorder default baud rate is 115200.

1. Read data (function code 0x03)

Inquiry frame (hexadecimal), sending example: query 1 data of 1# device, the upper computer sends the command: 01 03 00 00 00 01 84 0A.

Address	Function Code	Start Address	Data Length	Check Code
01	03	00 00	00	01 84 0A

For the correct query frame, the device will respond with data: 01 03 02 00 79 79 A6, response format:

01	03	02 00	79 79	A6
----	----	-------	-------	----


```
16-4) ÷ (20-4)+0</td></tr><tr><td>17</td><td>24. 4</td><td>(30-0)*(17-4) ÷ (20-4)+0</td></tr><tr><td>18</td><td>26. 3</td><td>(30-0)*(18-4) ÷ (20-4)+0</td></tr><tr><td>19</td><td>28. 1</td><td>(30-0)*(19-4) ÷ (20-4)+0</td></tr><tr><td>20</td><td>30. 0</td><td>(30-0)*(20-4) ÷ (20-4)+0</td></tr></tbody></table>
```

As shown in the above formula, when measuring 8mA, current current is 11.5m/s.

For example, the range is 0~30m/s, the analog output is 0~5V DC0-5Vvoltage signal, wind speed and DC0-5Vvoltage The calculation relationship is as shown in the formula: $C = (A2-A1) * (X-B1) / (B2-B1) + A1$, where A2 is wind speed range upper limit, A1 is the lower limit of the range, B2 is DC0-5Vvoltage output range upper limit, B1 is the lower limit, X is the currently read wind speed value, and C is the calculated DC0-5Vvoltage value. The list of commonly used values is as follows:

DC0-5Vvoltage (V)	wind speedValue (m/s)	Calculation Process
0	0.0	$(30-0)*(0-0) ÷ (5-0)+0$
1	6.0	$(30-0)*(1-0) ÷ (5-0)+0$
2	12.0	$(30-0)*(2-0) ÷ (5-0)+0$
3	18.0	$(30-0)*(3-0) ÷ (5-0)+0$
4	24.0	$(30-0)*(4-0) ÷ (5-0)+0$
5	30.0	$(30-0)*(5-0) ÷ (5-0)+0$

As shown in the above formula, when measuring 2.5V, current DC0-5Vvoltage is 15m/s.

RS485 型：通讯协议

产品使用 RS485 MODBUS-RTU 标准协议格式, 所有操作或回复命令都为 16 进制数据。设备出厂时默认设备地址为 1, 默认波特率为 模块及非记录仪表: 9600, 8, n, 1 或 记录仪: 115200, 8, n, 1 。

1. 读取数据 (功能码 0x03)

问询帧 (十六进制), 发送举例: 查询 1#设备 1 个数据, 上位机发送命令: 01 03 00 00 00 01 84 0A 。

地址	功能码	起始地址	数据长度	校验码
01	03	00 00	00 01	84 0A

对于正确的问询帧, 设备会响应数据: 01 03 02 00 79 79 A6 , 响应格式:

地址	功能码	长度	数据 1	校验码
01	03	02	00 79	79 A6

数据说明: 命令中数据为十六进制, 以数据 1 为例, 00 79 转为十进制数值为 121, 假设数据倍率为 100, 则真实值为 121/100=1.21, 其它以此类推。

2. 常用数据地址表

组态地址	寄存器地址	寄存器说明	数据类型	值范围
40001	00 00	1#风速寄存器	只读	0~65535

40101	00 64	型号编码	读/写	0~65535
40102	00 65	测点总数	读/写	1~20
40103	00 66	设备地址	读/写	1~249
40104	00 67	波特率	读/写	0~6
40105	00 68	通讯模式	读/写	1~4
40106	00 69	协议类型	读/写	1~10

3 读取与修改设备地址

(1) 读取或查询设备地址

若不知道当前设备地址、且总线上只有一个设备时，可以通过命令 FA 03 00 66 00 01 71 9E 查询设备地址。

设备地址	功能码	起始地址	数据长度	校验码
FA	03	00 66	00 01	71 9E

FA 即 250 为通用地址，当不知道地址时可以用 250 这个地址来取得真实设备地址，00 66 为设备地址的寄存器。

对于正确的查询命令，设备会响应，比如响应数据为：01 03 02 00 01 79 84，其格式解析如下表所示：

设备地址	功能码	起始地址	型号编码	校验码
01	03	02	00 01	79 84

响应数据中，第一个字节 01 表示当前设备的真实地址。

(2) 更改设备地址

比如当前设备地址为 1，我们希望更改为 02，则命令为：01 06 00 66 00 02 E8 14。

设备地址	功能码	寄存器地址	目标地址	校验码
01	06	00 66	00 02	E8 14

更改成功后，设备会返回信息：02 06 00 66 00 02 E8 27，其格式解析如下表所示：

设备地址	功能码	寄存器地址	目标地址	校验码
02	06	00 66	00 02	E8 27

响应数据中，修改成功后，第 1 个字节为新的设备地址，一般设备地址更改后，立即生效，此时用户需要同时将自己软件的查询命令做相应更改。

4 读取与修改波特率

(1) 读取波特率

设备默认出厂波特率为 9600，若需要更改，可根据下表及相应通讯协议进行更改操作。比如读取当前设备的波特率 ID，命令为：01 03 00 67 00 01 35 D5，其格式解析如下。

设备地址	功能码	起始地址	数据长度	校验码
01	03	00 67	00 01	35 D5

读取当前设备的波特率编码。波特率编码：1 为 2400；2 为 4800；3 为 9600；4 为 19200；5 为 38400；6 为 115200。

对于正确的查询命令，设备会响应，比如响应数据为：01 03 02 00 03 F8 45，其格式解析如下表所示：

设备地址	功能码	数据长度	波特率编码	校验码
01	03	02	00 03	F8 45

根据波特率编码，03 为 9600，即当前设备的波特率为 9600。

(2) 更改波特率

比如将波特率从 9600 更改为 38400，即将代码从 3 更改为 5，则命令为：01 06 00 67 00 05 F8 16。

设备地址	功能码	寄存器地址	目标波特率	校验码
01	06	00 67	00 05	F8 16

将波特率从 9600 更改为 38400，即将代码从 3 更改为 5。新的波特率会即时生效，此时设备会失去响应，查询设备的波特率需做相应修改。

5 读取与修改校正值

(1) 读取校正值

当数据与参照标准有误差时，我们可以通过调整“校正值”来减小显示误差。校正差值可修改范围为正负 1000，即值范围为 0-1000 或 64535-65535。比如当显示值偏小 100 时，我们通过增加 100 来校正，命令为：01 03 00 6B 00 01 F5 D6。在命令中 100 即十六进制 0x64；如果需要减小，则可以设置负值，比如-100，对应十六进制制值为 FF 9C，其计算方式为 100-65535=65435，再转为十六进制则为 0x FF 9C。设备校正值是从 00 6B 开始，我们以第 1 个参数为例进行说明，多个参数时校正值读取与修改方法相同。

设备地址	功能码	起始地址	数据长度	校验码
01	03	00 6B	00 01	F5 D6

对于正确的查询命令，设备会响应，比如响应数据为：01 03 02 00 64 B9 AF，其格式解析如下表所示：

设备地址	功能码	数据长度	校正值	校验码
01	03	02	00 64	B9 AF

响应数据中，第一个字节 01 表示当前设备的真实地址，00 6B 为第一个状态量校正值寄存器。若设备有多个参数，其它参数操作方式与此相同，一般温度、湿度有此参数，光照一般没有此项。

(2) 更改校正值

比如当前状态量偏小，我们希望将其真实值加 1，当前值加 100 校正操作命令为：01 06 00 6B 00 64 F9 FD。

设备地址	功能码	寄存器地址	目标地址	校验码
01	06	00 6B	00 64	F9 FD

操作成功后，设备会返回信息：01 06 00 6B 00 64 F9 FD，成功更改后，参数立即生效。

4-20mA 电流型：风速与电流计算

例设量程为 0~30m/s，模拟量输出为 4~20mA 电流信号时，风速与电流的计算关系如公式所示： $C = (30 - 0) * (X - 4) \div (20 - 4) + 0$ ，其中 30 为风速量程上限，0 为量程下限，20 为电流输出量程上限，4 为下限，X 为当前读出的电流值，C 为计算出来的风速值，常用数值列表如下：

电流 X(mA)	风速值 C(m/s)	计算过程
4	0.0	$(30 - 0) * (4 - 4) \div (20 - 4) + 0$

5	1.9	$(30-0)*(5-4) \div (20-4)+0$
6	3.8	$(30-0)*(6-4) \div (20-4)+0$
7	5.6	$(30-0)*(7-4) \div (20-4)+0$
8	7.5	$(30-0)*(8-4) \div (20-4)+0$
9	9.4	$(30-0)*(9-4) \div (20-4)+0$
10	11.3	$(30-0)*(10-4) \div (20-4)+0$
11	13.1	$(30-0)*(11-4) \div (20-4)+0$
12	15.0	$(30-0)*(12-4) \div (20-4)+0$
13	16.9	$(30-0)*(13-4) \div (20-4)+0$
14	18.8	$(30-0)*(14-4) \div (20-4)+0$
15	20.6	$(30-0)*(15-4) \div (20-4)+0$
16	22.5	$(30-0)*(16-4) \div (20-4)+0$
17	24.4	$(30-0)*(17-4) \div (20-4)+0$
18	26.3	$(30-0)*(18-4) \div (20-4)+0$
19	28.1	$(30-0)*(19-4) \div (20-4)+0$
20	30.0	$(30-0)*(20-4) \div (20-4)+0$

如表所示，当测量值 8mA 时，当前风速为 7.5m/s。

DC0-5VDC0-5V 电压型：风速与 DC0-5V 电压计算

例设量程为 0~30m/s，模拟量输出为 0~5VDC0-5V 电压信号时，风速与 DC0-5V 电压的计算关系如公式所示： $C=(30-0)*(X-0) \div (5-0)+0$ ，其中 30 为风速量程上限，0 为量程下限，5 为 DC0-5V 电压输出量程上限，0 为下限，X 为当前读出的 DC0-5V 电压值，C 为计算出来的风速值，常用数值列表如下：

DC0-5V 电压 X(V)	风速值 C(m/s)	计算过程
0	0.0	$(30-0)*(0-0) \div (5-0)+0$
1	6.0	$(30-0)*(1-0) \div (5-0)+0$
2	12.0	$(30-0)*(2-0) \div (5-0)+0$
3	18.0	$(30-0)*(3-0) \div (5-0)+0$
4	24.0	$(30-0)*(4-0) \div (5-0)+0$
5	30.0	$(30-0)*(5-0) \div (5-0)+0$

如表所示，当测量值 2.5V 时，当前风速为 15m/s。

免责声明

本档提供有关产品的所有信息，未授予任何知识产权的许可，未明示或暗示，以及禁止发言等其它方式授予任何知识产权的许可?除本产品的销售条款和条件声明的责任，其他问题公司概不承担责任。并且，我公司对本产品的销售和使用不作任何明示或暗示的担保，包括对产品的特定用途适用性，适销性或任何专利权，版权或其它知识产权的侵权责任等均不作担保，本公司可能随时对产品规格及产品描述做出修改，恕不另行通知。

联系我们

品 牌： KLHA/快乐海岸

地 址： 上海市宝山区南东路 215 号 8 幢 快乐海岸品牌事业部

中文站： <http://www.klha.com>

国际站: <http://www.sonbus.com>

SKYPE : soobuu

邮 箱: sale@sonbest.com

电 话: 86-021-51083595 / 66862055 / 66862075 / 66861077